


FND TAGS PRIOR TO
CONST. SET TAGS ON TANG.
REF. Q 2-7-97


RESET SPIKE AFTER CONST.
STW LS 6771 7-15-97
RECESSED SPIKE BELOW F.S. 11-17-97
RECESSED L+T L.S. 6771 PER CITY
REQUEST AND CHISELED "T" 1-21-98

PHONE #
626-359-6250

STAMP
SIGNATURE
+ PHONE #
ON BACK
PER CITY
REQUEST

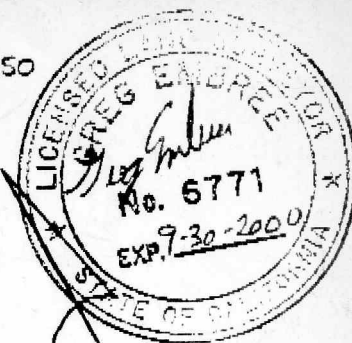

* SET ADDITIONAL L+T L.S. 6771
PER CITY REQUEST
TO AVOID DRIVES
1-21-98

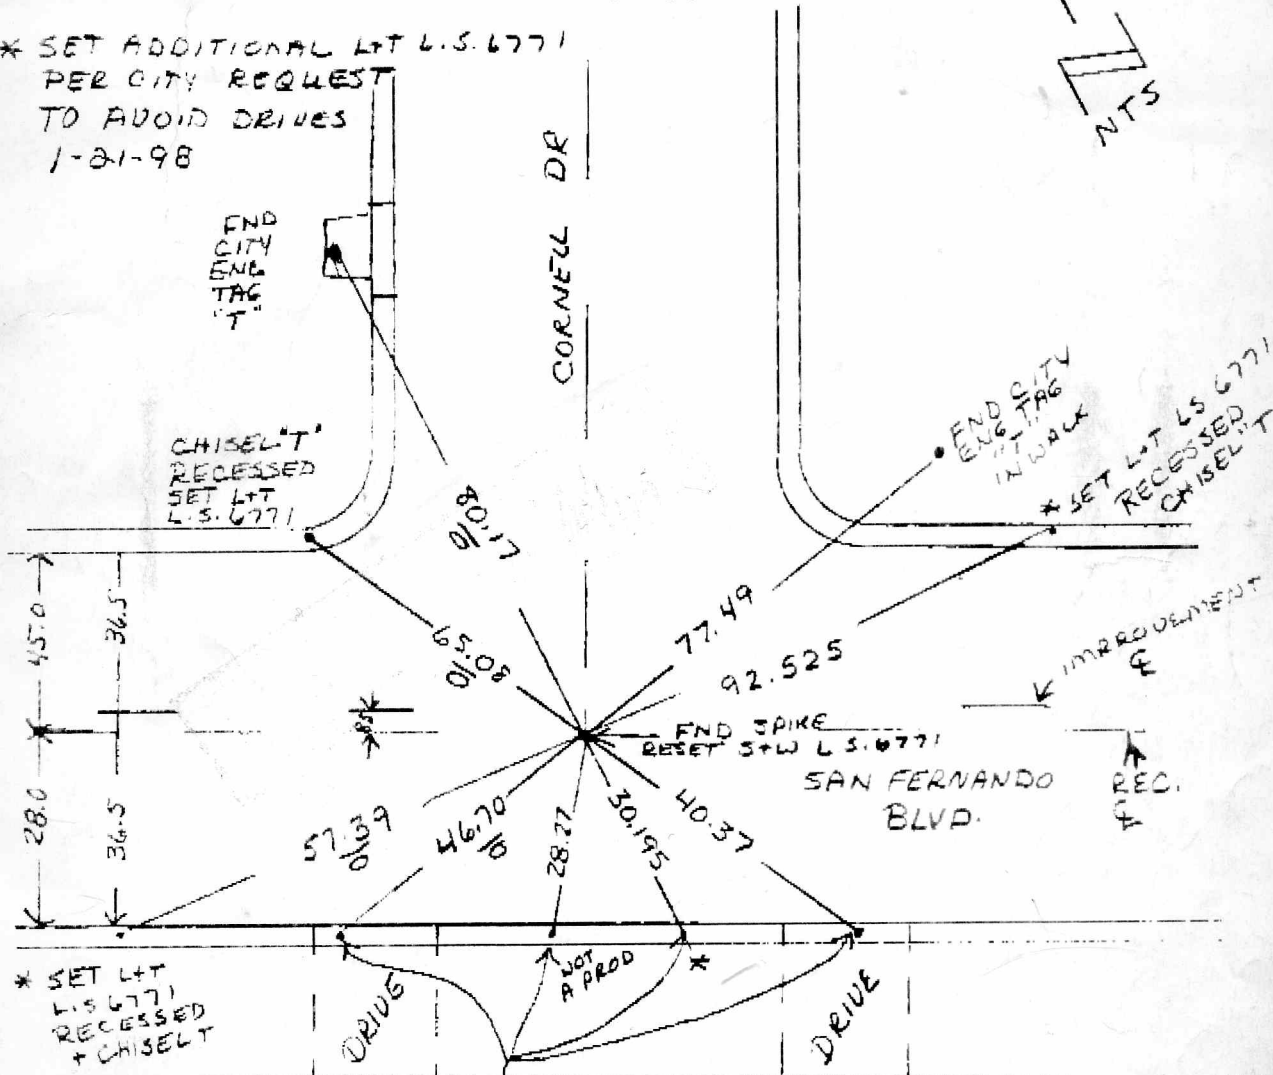

* SET L+T
L.S. 6771
RECESSED
+ CHISEL T

SET L+T L.S. 6771
RECESSED + CHISEL
"T" ON TANGENTS

TAGS IN DRIVE
SET IN CONCRETE
INSTEAD OF LEAD